

can also be configured to disable and enable credential technologies from the ENGAGE Web Application when connected and linked with a CTE.

Follow these steps to **disable** the **Proximity Credential technology** in the MT or MTB family of wall mounted credential readers:

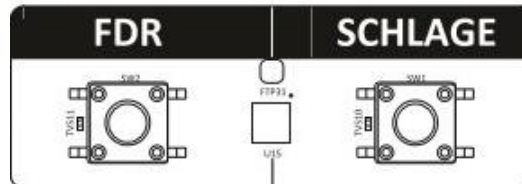
1. **Locate** the correct configuration card, part number **CE-401-101**.
2. Power cycle the credential reader.

**WARNING**


- The reader will boot up after power is applied
- Be sure to wait until the reader beeps three times before presenting the Configuration Card or it will not perform as intended

3. Within the first 60 seconds from power up (and after Boot Up), **present** and **hold** the configuration card to the reader.
4. The reader acknowledges the configuration card by beeping 3 times; the LED flashes **RED** with each beep.
  - When the beep and LED sequence finish, the configuration update to ignore Proximity card presentations is complete.
5. Once the Proximity technology is disabled, the CTE and the credential reader must be “Paired” or linked together.
  - Remove the CTE lid.
  - **Press and release the Schlage button** once.
  - **Press the FDR button** 2 times; one beep for each button press.

The credential readers' LED will flash **GREEN** when successful.

**PCB Switches**


6. Present a **Proximity Credential** to the reader to verify the Proximity technology is now ignored when presented.
  - The reader does not acknowledge credentials with Proximity technology. No Beeps or Blinks